

UPSPower Console Installation & User Guide

Software Setup

This software is designed to run in Windows95, Windows98 or Windows NT (3.0 or later). Before using this software, be sure to install the UPS correctly. (For the detail, please read the hardware installation guide.)

1. System Requirement

486 or higher, at least 8M memory

Windows95, Windows98 or Windows NT (3.0 or later)

2. Setup Step

(1) Insert the disk into floppy driver.

(2) Double click 'my computer'. Second, start installation program "setup.exe" on the floppy disk.

(3) For the screen appearing the interface of UPSPOWER installation, you can finish the installation by the prompt.

(4) By the installation finished, you must restart your windows.

User Guide

Made sure you have installed the software and hardware correctly. When UPSPOWER is running, there will be an eye's icon in the system tray (at the right side of the taskbar). If the UPS connected with the computer failed, you shall see the UPSPOWER's interface and read the information above the UPS and computer. Now you shall examine the UPS connected with the computer correctly or not. Second, you shall examine the COM port by setup. (Default COM2).

Function of bottoms

1. System setup

User ComPort: include COM1, COM2, COM3 and COM4 (default COM2).

Used language: include English and Simple Chinese (default English)

Batt. can support after AC fail: MAX 1800s (default 1200s). Batt. can support after low: MAX 540s (default 180s) When the AC power fail or the battery low, UPSPOWER will count down if the system setup is correct. If the power is not restore all along, UPSPOWER will save your files that you hadn't saved and turn off your computer and UPS. The files saved by UPSPOWER shall appear in the directory, that is '\TEMP' of the Windows, filename is Wxx.tmp.DefaultExtend. For example:

C:\WINDOWS\TEMP\WDE.TMP.DOC

2. Hide Windows

UPSPOWER will hide in the system tray.

3. Shut Imm.

UPSPOWER will save your files that you hadn't saved and turn off your computer and UPS. This function is activated while the AC power fail or the battery low.

4. Quit

Quit UPSPOWER

Other functions:

1. When you double click the icon at the system tray, UPSPOWER will appear in the screen.
2. When you right-click the icon at the system tray, The shortcut menu will appear.